



Canon EOS 30 Battery Door Replacement

How to replace battery door.

Written By: Jackie



INTRODUCTION

This fix is safe and only requires a screwdriver.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Front Panel



- Remove two 4.8 mm black screws on the front of the camera.

Step 2



- Remove one 4.3 mm black screw under the lens ring and one 4.8 mm black screw on the bottom of the camera.

Step 3



- Remove one 4.8 mm black screw on the left side.

Step 4



- Remove the front panel by lifting out the side opposite the grip.

Step 5 — Bottom Panel



- Remove seven 4.25 mm black screws on the bottom panel.

Step 6



- Remove the bottom panel.

Step 7 — Side Panel With Remote Control Socket




- Remove two 6.5 mm black screws from the panel.

Step 8



- Remove plastic Remote Control Socket cap by pulling it straight out.

Step 9

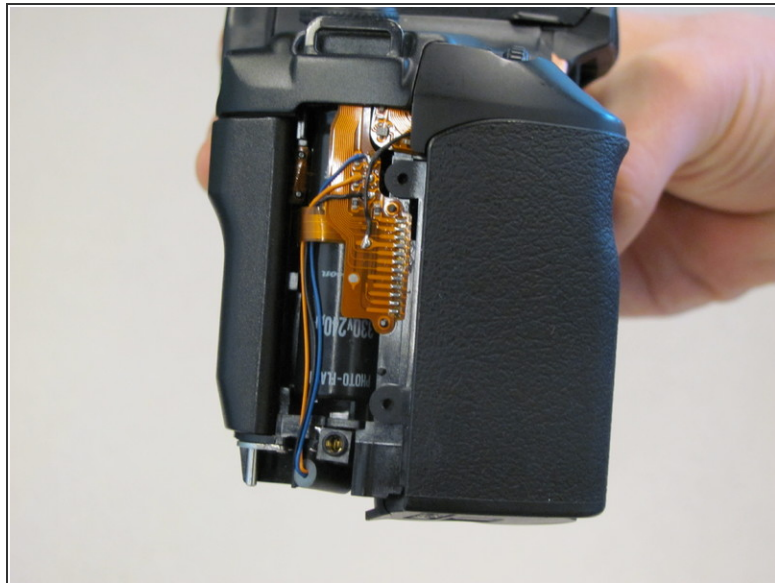

- Slide panel toward bottom of camera to remove.

Step 10 — Top Panel



- Slide the outer eyepiece upward to remove it.

Step 11



- Remove two 4.75 mm Phillips #00 screws from top of camera.

Step 12



- Remove four 4.3 mm Phillips #00 screws from back of camera.

Step 13



- Slowly separate top panel from camera by pushing up.


⚠ Be careful, as top panel is still attached by wiring and ribbon cable to the camera.

Step 14




⚠ Separating the top panel too far can damage the connecting wiring.

Step 15 — Grip

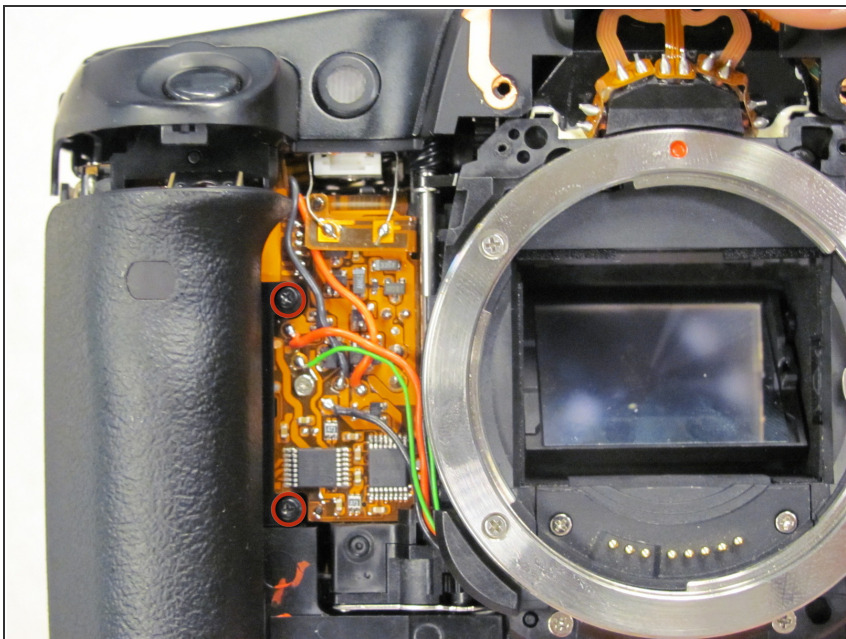


- Remove two 5.5 mm screws from front of camera.

Step 16

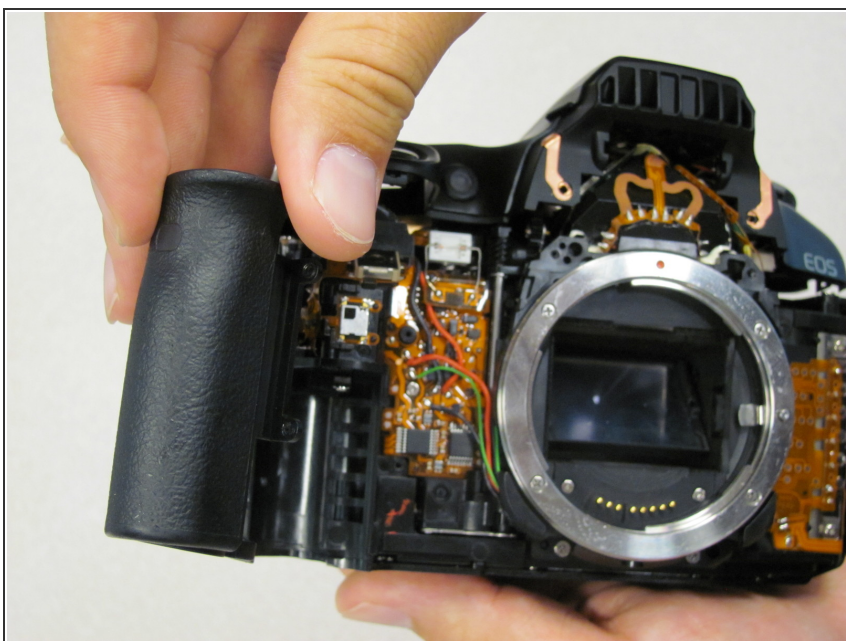

- Remove grip panel.

Step 17 — Battery Door

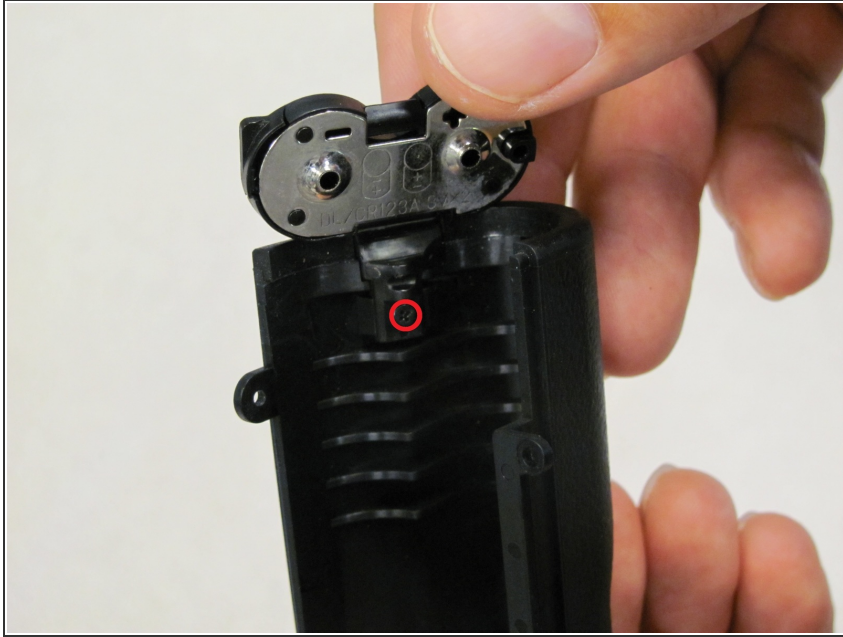

- Remove one black screw from battery door on underside of grip.

Step 18



- Remove battery door.

To reassemble your device, follow these instructions in reverse order.